Application Note Omron PLC and CX-Programmer

This document guides you through the setup of proprietary vendor specific software installed on you PC. Your supervisor may provide you with additional or alternative instructions.

The document consists of standard instructions that may not fit your particular solution. Please visit our support website for latest revisions of documentation and firmware:

http://www.secomea.com

Version: 1.0, November 2009

secumea

Table of Contents

1.	Prerequisite for this guide	3
2.	Logon the LinkManager	4
3.	Click and Choose in the LinkManager	4
4.	Online with Omron and CX-Programmer	5
5.	Notices	8



Page 2 of 8

1. Prerequisite for this guide

The following guide will assist you to setup a remote and online connection to the equipment placed on the customer site using your proprietary vendor specific software installed on you PC. A prerequisite for this guide is:

- 1. You have an operational LinkManager installed on your PC and you are able to see the vendor specific equipment.
- 2. You have the proprietary vendor specific software installed on your PC.
- 3. You have the Omron device agent installed and configured on the SiteManager at the remote site.

If this is not the case, we kindly ask you to contact the person / department responsible within your own company or at the company responsible hereof.

System overview

The Remote Device Management system is a complete end-to-end solution for easy and secure remote access, monitoring and management of industrial equipment for the automation- and machine builder industry.

The Remote Device Management solution enables machine builders, service providers and end-users to instantly access, monitor, and manage machines and equipment remotely and effectively over secure high speed internet connections.

The following system overview is with a SiteManager 3034 or 3134 at the customer location:



Figure 1 - System overview



Page 3 of 8

2. Logon the LinkManager

This describes how to logon your LinkManager software. If you are already logged on, please go to number 3.

- 1. Start the LinkManager from the START > Programs > Secomea Link-Manager.
- 2. Select Console menu from the LinkManager Tray Icon menu.
- 3. Login uses the GateManager certificate and password which is obtained from your GateManager administrator. Then please click **Login**.

LinkManager secomea	ch
Logi GateManager: Secomea GateMar	

Figure 2 LinkManager login Screen

3. Click and Choose in the LinkManager

This describes how to click and choose the device you wish to get online with. If you are already online, please go to number 4.

1. Click **<Connect all>** to connect to all devices or click a specific device to connect to only this single device:

LinkManager secomea	ch
Logout Services ROOT.demo.Toplevel.EMEA.Denm	Sniffer Refresh ark.CustomerF.Production Plant 2
ROOT.demo.Toplevel.EMEA.Denmark CustomerA CustomerB CustomerD CustomerP CustomerF Production Plant 1 Production Plant 2	

Figure 3 LinkManager Screen (example) Access to all devices or to a single device

secumea



4. Online with Omron and CX-Programmer

Get online with your CX-One:

- 1. Start CX-One
- 2. Start CX-Programmer

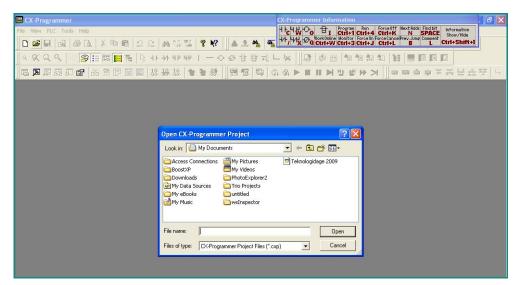


Figure 4 CX-Programmer Screen – Open project

- 3. Choose your project
- 4. Press Open

📟 Teknologidage 2009 - CX-Programmer	
File Edit View Insert PLC Program Simulation Tools Win	idow Help
	14 12 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
● 冬 鸟 �� ■ 璽 菖 ● ● ク タ チ キ キ	
□ ₽ ₽ ₽ ₽ ₽ ₽ ₽ ₽ ₽ ₽	悠(尊著왕]]명영(평)(강송▶■Ⅲ▶방행▶≯]]ㅋㅋㅋㅋㅋ프콜랴푸 드
NeweFrCIfCIIN Offine Symbols Symbols Memory Programs Function Blocks	Change PLC Perice Name NewoFLC1 Device Type CiTIM Settings Ethernet Ethernet Ethernet(INSTCP) EtherNet/IP EtherNet/IP SYMACLINK SYSMACLINK SYSMACLINK SYSMACLINK Help
Project /	
For Help, press E1	NewPI C1(Net:0.Node:0) - Offline

Figure 5 CX-Programmer Screen

- 5. Click twice on the CPU in the screen "NewPLC[CJ1M] Offline"
- 6. Choose the Network Type >> Ethernet(FINS/TCP) <<

Page 5 of 8

📟 Teknologidage 2009 - CX-Programmer	🔳 🗗 🖊
File Edit View Insert PLC Program Simulation Tools	Window Help
	▲ ¼ % ♀ ♥ <mark>▲ ≵ %</mark> 등
k+t+ & 新聞開催 アク メッ	+ 419 49 リークダ甘茸モーメ 日感 ② 〇〇 18 18 18 18 18 18 18 18 18 18 18 18 18
11	◎「「「」」(「「」」(「「」」(「」」)(「「」」(「」」)(「」」(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(「」」)(」」)(
NewProject Image: Control of File Image: Control of The C	Change PLC X Device Name X Vetwork Settings [fthernet(fINS/TCP)] X Network Drive X Vorkstation Node Number X Valoregoliation Image: Comparison of the temperature IPAddeess Port Number 172 · 24 · 2 · 123 9600 DK Cancel Help
For Help, press F1	NewPI C1(Net:0.Node:0) - Offline

Figure 6 CX-Programmer Screen

- 7. Click >> Settings << and >> Driver <<
- 8. Specify the Target PLC IP address
- 9. Click OK

📟 Teknologidage 2009 - CX-Programmer - [Ne			1 ×
File Edit View Insert PLC Program Simulation	Tools Wi	indow Help	- 1 ×
□□ 🖉 🖗 🖓 🖓 🖓 🕼 😭 🖾 🗒 🖉 🛄 👌		\$\$\$\$\$	#
NewProject SwePic1[C]1M] Offline Symbols To Table and Unit Setup	<u>≤</u> 0 1	[Program Name : NewProgram1] [Section Name : END]	-
G Settings Memory Digital Settings	1	END(001) -	ind
G G MeWPogrami (00) → Symbol Section1 → G END → END → IP Function Blocks		CX-Programmer v8.0	
Project /			•
1 Second second	×	Name: Address or Value: Comment:	
For Help, press F1		NewPLC1(Net:0,Node:0) - Offline rung 0 (0, 0) - 100%	

Figure 7 CX-Programmer – Connect to the PLC

- 10. Click on >> Work Online <<
- 11. Press Yes

Page 6 of 8

📟 Teknologidage 2009 - CX-Programmer - [[Runi				rogran	n1.END [Di	iagram]]							. 🗗 🗙
File Edit View Insert PLC Program Simulation T	iools W	indow H	elp										- 8 ×
]] D 🗳 🖬 🏤 🖨 🖪 X 🐚 🖻 그 으	幽鸿	72 1	N?	<u>a</u> 3	. 49 <u>.</u> 👼		D. J) 🕂 🕅	a 🖉	•	g 🚌 🍶 ₩	€ 5	
_ < << < < ⊨ 🔤 🖬 🔤 🖡 🕞 + ⊦	1 /1- 41P	474 I	$-\diamond$	ø₿	雪元し	- 😾 📗	5	🏥 📍					
🖪 🗛 🐺 🖓 😭 🍈 📅 🕅 🔛 🛄 🞎 .	19 16	19:3	: 懇 🛛	89	194	s ⊗s ►		目生き			● ● ∓ ;	+ + + + + + + + + + + + + + + + + + +	<u>***</u>
NewProject	0 1	[Prog	iram Name	e : NewP	rogram1]								•
RewPLC1[CJ1M] Monitor Mode		[Sect	ion Name	: END]									
Symbols												1	
											ENI	D(001)	End
Error log Error log DLC Clock	1	- 											
Memory													
🗐 🤯 NewProgram1 (00) Running													
Function Blocks													
_													
													-
	I I	_	Name:	_		محمد العام	or Value:		Commer	b .			•
For Help, press F1	ركرهم	NewPLC		lode:0) -	Monitor Mod		0r value: 0,8 n	ns		ic: (0, 0) - 100'	%		

Figure 8 CX-Programmer - Online

12. You are now online with the PLC



Page 7 of 8

5. Notices

Publication and copyright

Omron and CX-Programmer, Version 1.0, November 2009

© **Copyright Secomea A/S 2009**. All rights reserved. You may download and print a copy for your own use. As a high-level administrator, you may use whatever you like from contents of this document to create your own instructions for deploying our products. Otherwise, no part of this document may be copied or reproduced in any way, without the written consent of Secomea A/S. We would appreciate getting a copy of the material you produce in order to make our own material better and – if you give us permission – to inspire other users.

Trademarks

TrustGateTM is trademark of Secomea A/S. Other trademarks are the property of their respective owners.

Disclaimer

Secomea A/S reserves the right to make changes to this publication and to the products described herein without notice. The publication of this document does not represent a commitment on the part of Secomea A/S. Considerable effort has been made to ensure that this publication is free of inaccuracies and omissions but we can not guarantee that there are none.

The following paragraph does not apply to any country or state where such provisions are inconsistent with local law:

SECOMEA A/S PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTA-BILITY OR FITNESS FOR A PARTICULAR PURPOSE

Secomea A/S shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.

Secomea A/S Denmark

CVR No. DK 31 36 60 38

E-mail: sales@secomea.com www.secomea.com



Page 8 of 8